


Anti-lock brake system (ABS) with electronic differential lock (EDL),

from January 1998


 
Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

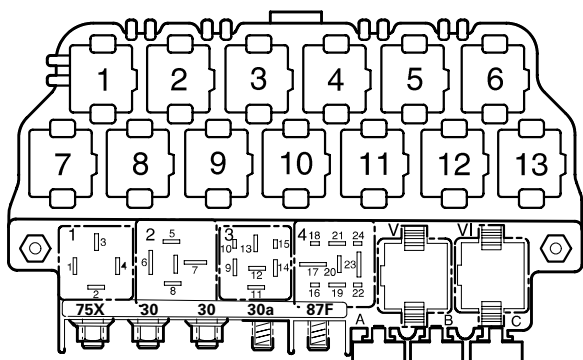

97-21956


Fuse colors

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

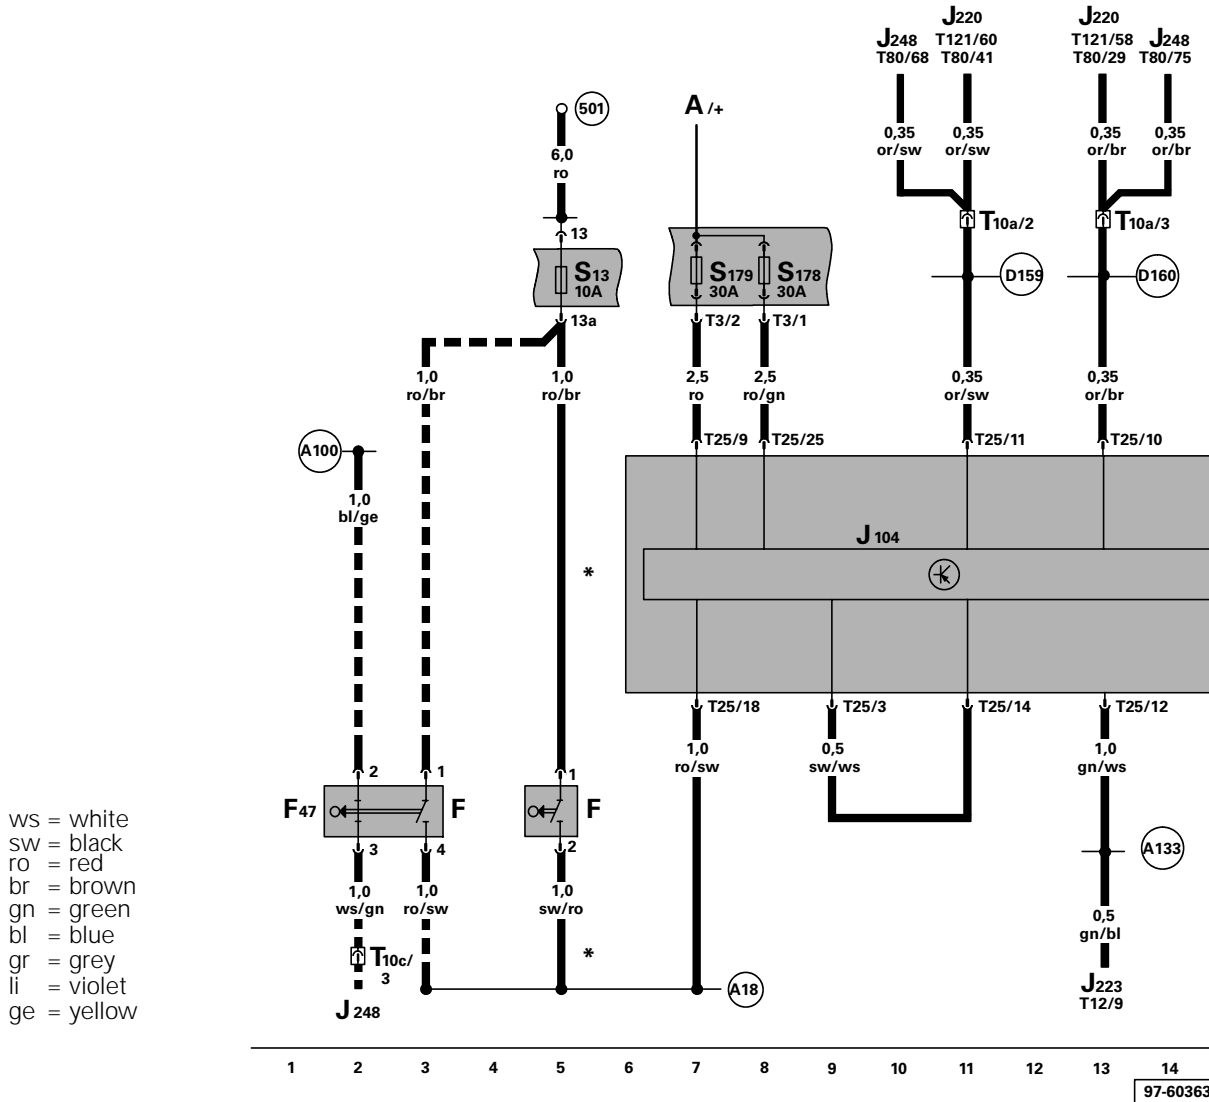

- A - Battery
- F - Brake Light Switch
- F47 - Brake Vacuum Vent Valve Switch for cruise control/diesel fuel injection (DFI)
- J104 - ABS Control Module (w/EDL)
- J220 - Motronic Engine Control Module (TCM)
- J223 - Rear Spoiler Control Module
- J248 - Diesel Direct Fuel Injection (DFI) Engine Control Module (ECM)
- S13 - Fuse 13 in fuse holder
- S178 - Fuse -6- (30), in fuse bracket/battery
- S179 - Fuse -7- (30), in fuse bracket/battery
- T3 - 3-Pin Connector,
- T10a - 10-Pin Connector, orange, behind instrument panel, left
- T10c - 10-Pin Connector, blue, behind instrument panel, left
- T12 - 12-pin Connector
- T25 - 25-Pin Connector


- T80 - 80-Pin Connector, on Control Module
- T121 - 121-Pin Connector, on Control Module
- (A18) - wire connection (54) , in instrument panel wiring harness
- (A100) - Connector -2- (87) in instrument panel wiring harness
- (A133) - Connection (ABS-signal left) in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (D159) - CAN - bus High, in engine wiring harness
- (D160) - CAN - bus Low, in engine wiring harness
- - - Diesel only
- * - Gasoline only

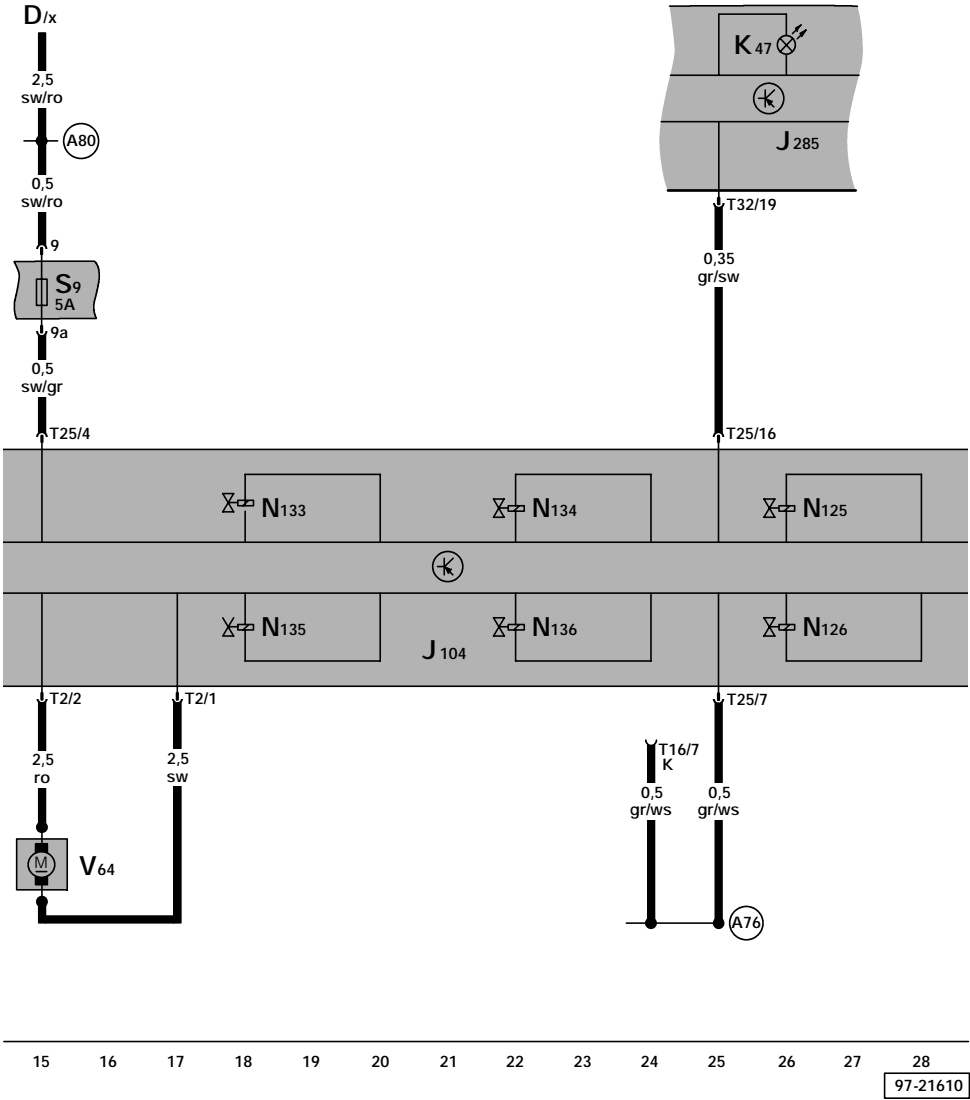

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- D - Ignition/Starter Switch
- J104 - ABS Control Module (w/EDL)
- J285 - Control module with indicator unit in instrument panel insert
- K47 - ABS Warning Light
- N125 - Differential Lock Valve 1
- N126 - Differential Lock Valve 2
- N133 - Right Rear ABS Inlet Valve
- N134 - Left Rear ABS Inlet Valve
- N135 - Right Rear ABS Outlet Valve
- N136 - Left Rear ABS Outlet Valve
- S9 - Fuse 9 in fuse holder
- T2 - Double Connector
- T16 - 16-Pin Connector, Data Link Connector (DLC) below steering column

- T25 - 25-Pin Connector
- T32 - 32-Pin Connector, blue, on instrument cluster
- V64 - ABS Hydraulic Pump
- (A76) - Connector (K-diagnosis wire), in instrument panel wiring harness
- (A80) - Connector -1- (X), in instrument panel wiring harness

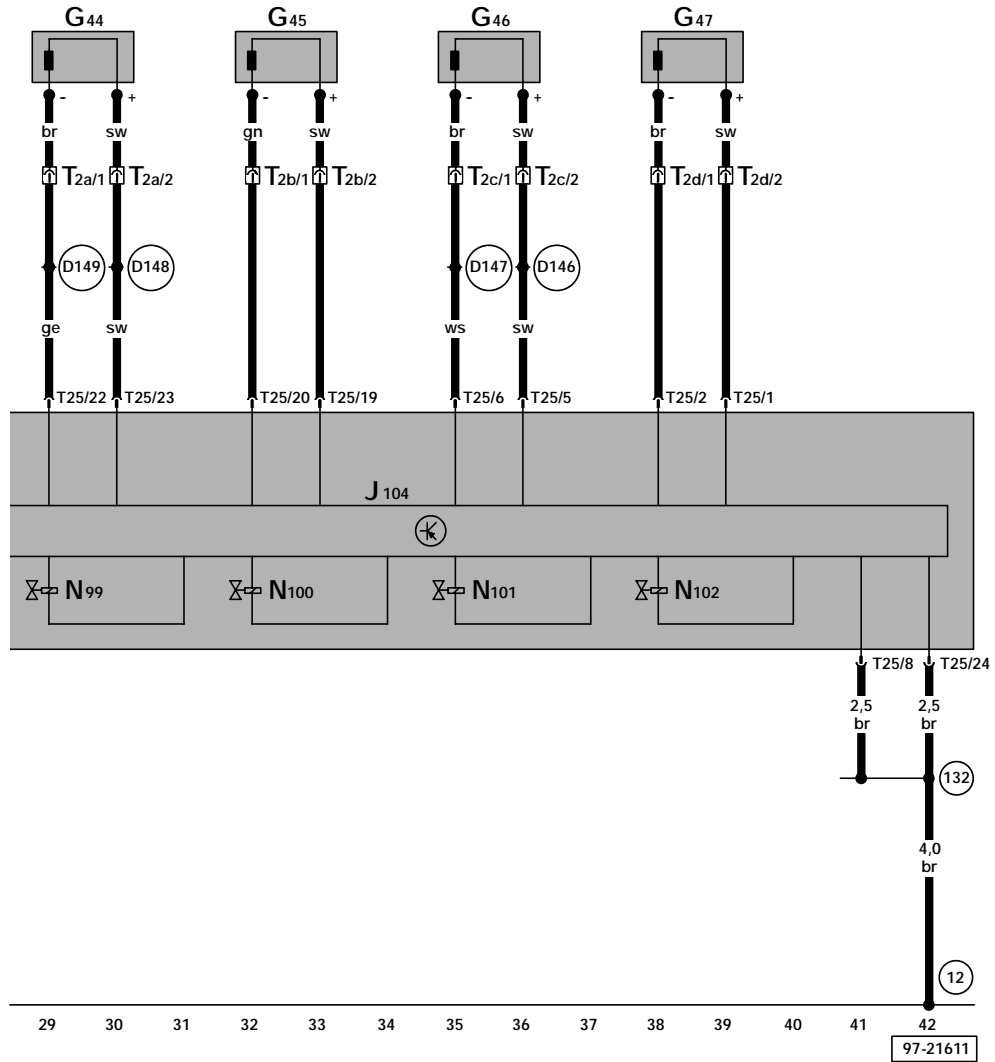

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- G44 - Right Rear ABS Wheel Speed Sensor
- G45 - Right Front ABS Wheel Speed Sensor
- G46 - Left Rear ABS Wheel Speed Sensor
- G47 - Left Front ABS Wheel Speed Sensor
- J104 - ABS Control Module (w/EDL)
- N99 - Right Front ABS Inlet Valve
- N100 - Right Front ABS Outlet Valve
- N101 - Left Front ABS Inlet Valve
- N101 - Right Front ABS Inlet Valve
- T2a - Double Connector, on Rear Right ABS Wheel Sensor
- T2b - Double Connector, on Front Right ABS Wheel Sensor
- T2c - Double Connector, on Rear Left ABS Wheel Sensor

- T2d - Double Connector, on Front Left ABS Wheel Sensor
- T25 - 25-Pin Connector, at ABS Control Module
- (12) - Ground connection, in engine compartment, left
- (132) - Ground connection -3-, in engine compartment wiring harness
- (D146) - Connector(speed sensor rear, left +), in wiring harness engine compartment
- (D147) - Connector(speed sensor rear, left -), in wiring harness engine compartment
- (D148) - Connector(speed sensor rear, right +), in wiring harness engine compartment
- (D149) - Connector(speed sensor rear, right -), in wiring harness engine compartment